



# Model 379 Assembly Instructions

## Concert Grand



Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***

## **WARNING!**

This product must be assembled by an adult prior to play. Unassembled parts may have sharp edges which could cause injury. The piano and bench are designed for use by a child. Inspect the hardware periodically for tightness and integrity, tightening or replacing any loose parts

## **Parts**

Piano Body	Bench seat
Rear legs, short (two)	Bench legs (two)
Front legs, long (two)	Wood screws (two)
Rear foot	Barrel nuts (four)
Music stand	Allen screws (four)
Song book and color strip	Allen key

## **Assembly**

**Alert: Hardware is located inside the Styrofoam packing material**

Step 1 - Turn piano body over. Screw in rear legs and front legs.

Step 2 – Attach rear foot with wood screws.

Step 3 –Turn piano over and insert music stand into slot in top of piano.

Step 4 – Insert 4 barrel nuts into the side rails on the underside in the bench seat. Important: Use vertical slot on barrel nut as a guide for proper alignment, enabling the screw to thread into it easily.

Step 5 - Attach legs to short end of bench with machine screws, lining them up by hand until they thread in easily (Do not force them). Use an Allen wrench or a Phillips screw driver to tighten.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***

A slight tilt to the piano keys is normal. The loose-pivot design is intentional to provide an easy, light touch for little fingers. Occasionally, keys may jog out of position during shipping. Running your hand lightly both ways across the keyboard, or further by lifting and gently shaking the piano may easily remedy this. The keys will then fall into their proper position.

Fold the color music strip so that it lines up appropriately behind the black keys.

Any questions, call our toll-free number during normal business hours so that a customer service representative may assist you.

In the event of shipping damage, **DO NOT RETURN THE PIANO TO A STORE.** Instead, call our office during normal business hours for a Return Authorization Number (RA#). This RA# is required and must be authorized by Schoenhut Piano Company for return of a product. Credit or replacement will not be issued unless the product is packed properly in its original packaging within the 30-day Manufacturer's Warranty.

Congratulations on your choice of Schoenhut®, leader in the world of toy pianos since 1872. Our musical instruments are designed to develop basic playing skills, while encouraging children on a path to music.

Schoenhut® Piano Company, 6480B US1 North, Saint Augustine, FL USA  
Phone 904-810-1945 Fax 904-823-9213 Email [info@toypiano.com](mailto:info@toypiano.com) Website [www.toypiano.com](http://www.toypiano.com)  
***“Manufacturer of Toy Pianos since 1872”***